

Mediatrix[®]

A Division of **media5** Corporation



Configuration Notes 242

Mediatrix 3000 Digital Gateway Corporate Network

February 15, 2007

Proprietary

© 2007 Mediatrix Telecom, a Division of Media5 Corporation



Table of Contents

Introduction	3
Mediatrix 3000 Digital Gateway Overview	3
Deployment Scenario.....	4
Description.....	4
Objectives	4
Assumptions	5
Steps.....	5
Configuration of the Mediatrix 3000 Digital Gateway	6
Physical Connection of the Mediatrix 3000 DG to the Network and PSTN	6
IP Address Discovery or Configuration	6
Web Interface Access.....	7
SIP Configuration.....	8
ISDN Configuration.....	9
Call Routing Configuration.....	12
Basic Call Establishment	22
Further Information and Configuration	23
Appendix A - Restarting a Service.....	24



0242

Introduction

This document outlines the configuration steps to set up a Mediatrix® 3000 digital gateway to act as a gateway with the PSTN.

Mediatrix 3000 Digital Gateway Overview

These configuration notes apply to the Mediatrix 3000 Series digital gateway products. The Mediatrix 3000 Series digital gateways allow enterprises to lower communications costs over any IP link. The platform supports ISDN E1 and T1 PRI telephony interfaces, as well as ISDN BRI interfaces. They provide an ideal solution for enterprise voice applications or for connecting to a service provider's broadband access.



Mediatrix® 3000 digital gateways are fully scalable in terms of number of ports and functionalities. They currently come in the following models:

Model	Interfaces	VoIP Call Capacity
Mediatrix 3404	5 BRI ports	up to 8
Mediatrix 3408	10 BRI ports	up to 16
Mediatrix 3531	1xT1-PRI interface	up to 23
Mediatrix 3532	2xT1-PRI interface	up to 46
Mediatrix 3631	1xE1-PRI interface	up to 30
Mediatrix 3632	2xE1-PRI interface	up to 60

The Mediatrix digital gateways link any standard ISDN E1/T1 PRI or BRI connection to the IP network and deliver the clarity of toll quality voice for a comprehensive VoIP solution.

T.38 FoIP, fax bypass, and modem bypass capabilities ensure that the Mediatrix digital gateways seamlessly transport voice and data services. The Mediatrix digital gateways offer flexibility and scalability for VoIP network integration and low bandwidth voice.

With configurable NT/TE PRI ports, call-switching and user programmable call routing (including caller/called ID), Mediatrix digital gateways integrate smoothly into existing PBX and PSTN networks.

Key Features:

- Voice Routing.
- Fax over IP support, including T.38.
- Proven voice algorithms implemented on dedicated DSP for enhanced voice quality.
- Up to 60 simultaneous calls.
- SNMPv3 and web management.
- Configuration file encryption.
- Automatic firmware and configuration file download.
- PSTN Bypass feature (BRI models only).

Deployment Scenario

Description

This configuration note is a step-by-step guide to set up one Mediatrix 3632 Series digital gateway to act as a gateway with the PSTN in a corporate network. The Mediatrix 3632 is used to connect an existing VoIP network to the PSTN. The configuration starts with the Mediatrix 3632 default configuration but can be easily customized for the 3631, 3531, and 3532, so from now on, the device will be referred to as the *Mediatrix 3000 DG* (Digital Gateway). The following is the network topology to which we will refer in our sample deployment.

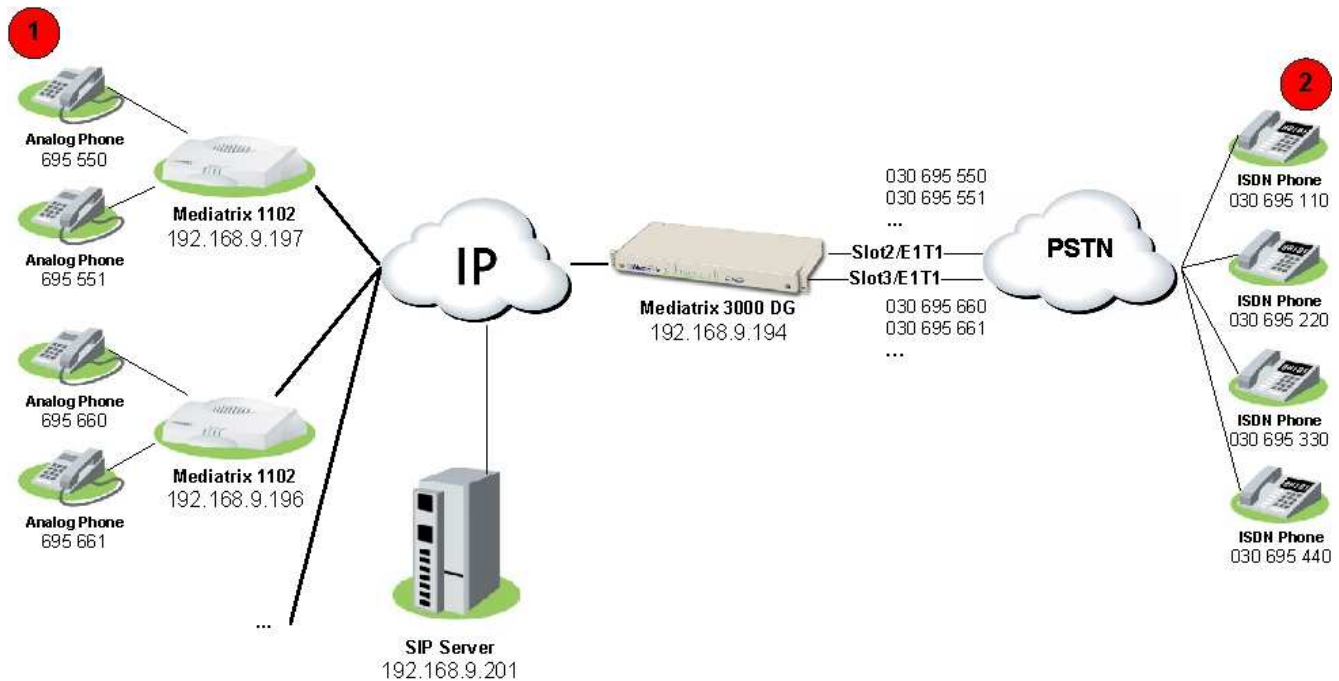


Figure 1 - Network Topology

Note: The network addresses and phone numbers shown above are sample values that will most probably vary in your specific setup. In the following pages, when referring to such a sample value, it will be visually outlined (e.g., 192.168.9.194), so whenever you see parameters outlined in that fashion, you should replace them with the values that are appropriate for your specific setup.

Objectives

The steps described in the following pages will show you how to setup the Mediatrix 3000 DG so it can:

- A. receive calls from the PSTN and route them to the VoIP network (e.g., phone 2 calls phone 1):
 1. a user picks up an ISDN phone and dials the number of a line connected to the Mediatrix 3000 DG.
 2. the PSTN routes the call to the Mediatrix 3000 DG.
 3. the Mediatrix 3000 DG routes the call to the appropriate Mediatrix 1102, removing necessary prefix (area code **030**) from the called number.
 4. the Mediatrix 1102 makes the appropriate analog phone ring.
 5. a user picks up the analog phone and the call is established.
- B. receive calls from the VoIP network and route them to the PSTN on one of the PRI lines connected to the Mediatrix 3000 DG (e.g. phone 1 calls phone 2):
 1. a user picks up an analog phone and dials a number.
 2. the appropriate Mediatrix 1102 routes the call to the Mediatrix 3000 DG.



0242

3. the Mediatrix 3000 DG decides to which ISDN PRI interface route this call.
4. the Mediatrix 3000 DG adds the necessary prefix (area code **030**) to the dialed phone number before routing the call to the PSTN.
5. the PSTN makes the appropriate ISDN phone ring.
6. a user picks up the ISDN phone and the call is established.

Assumptions

This configuration note focuses on configuring the Mediatrix 3000 DG and assumes that:

- the SIP server's default route's destination is the Mediatrix 3000 DG, e.g., when a number dialed on an analog phone is unknown, the call is sent to the Mediatrix 3000 DG.
- the left-hand side of the VoIP network setup is functional (Mediatrix 1102, analog phones, SIP server), and the SIP users are correctly registered to the SIP server.

Steps

This configuration note will guide you through the following steps:

1. Physical connection of the Mediatrix 3000 DG to the IP network and PSTN.
2. IP address discovery or configuration.
3. Web interface access.
4. SIP configuration.
5. ISDN configuration.
6. Call routing configuration.
7. Basic call establishment.



Configuration of the Mediatrix 3000 Digital Gateway

Physical Connection of the Mediatrix 3000 DG to the Network and PSTN

Please refer to the Mediatrix 3000 DG Quick Start booklet (packaged with the Mediatrix 3000 DG) for instructions on hardware installation.

The Mediatrix 3000 DG Quick Start booklet can also be found online on the Mediatrix Download Portal at <https://support.mediatrix.com/DownloadPlus/Download.asp>.

IP Address Discovery or Configuration

The purpose of this section is to be able to contact the Mediatrix 3000 DG's management interface to start with unit configuration.

Once the physical connection is complete and the Mediatrix 3000 DG is powered up, the first thing to do is find out the IP address the Mediatrix 3000 DG is using. The Mediatrix 3000 DG's WAN IP address can be set either dynamically or statically. The default behaviour of the Mediatrix 3000 DG is to try to obtain a dynamic IP address through DHCP.

You can also access the Mediatrix 3000 DG through its private LAN interface.

Dynamic WAN IP Address Discovery

Before connecting the Mediatrix 3000 DG to the network, Mediatrix strongly suggests that you reserve an IP address in your DHCP server for the unit you are about to connect. DHCP servers reserve IP addresses for specific devices by using a unique identifier for each device. The Mediatrix 3000 DG's unique identifier is its media access control (MAC) address. The MAC address appears on the label located on the bottom side of the unit.

If you have not reserved an IP address, you can discover which IP address has been assigned to the Mediatrix 3000 DG by either:

- consulting your DHCP server's logs to find out details on the DHCP lease that was given to the Mediatrix 3000 DG.
- using a network packet sniffer (e.g., Ethereal) to examine the DHCP messages exchanged between the Mediatrix 3000 DG and your DHCP server while the Mediatrix 3000 DG boots up.

Default WAN Static IP Address Configuration

If there is no DHCP server in your network, then the WAN IP address can be configured statically. The first thing to do is set the Mediatrix 3000 DG to its known default static IP address. You can do this by using the Mediatrix 3000 DG's partial reset feature (see the section [Further Information and Configuration](#) for more details).

1. Once the Mediatrix 3000 DG has finished booting up (the *Power* LED is lit, not blinking), insert a small, unbent paper clip into the RESET/DEFAULT hole located at the rear of the Mediatrix 3000 DG and press the RESET/DEFAULT button. The *Power* LED will start blinking, and after a few seconds, all the LEDs will start blinking. Release the paper clip after all the LEDs start blinking and before they all stop blinking (between 7-11 seconds).

After a partial reset is performed, the Mediatrix 3000 DG's WAN connection uses the default 192.168.0.1 IP address. From now on, you can optionally change the Mediatrix 3000 DG's IP address (see section [Further Information and Configuration](#) for more details).

LAN Interface Access

The Mediatrix 3000 DG's default LAN IP address is 192.168.0.10.



0242

Web Interface Access

The purpose of this section is to log in to the Mediatrix 3000 DG's web interface.

The Mediatrix 3000 DG's web interface may be used to view the status of the Mediatrix 3000 DG and set its numerous parameters.

1. In your web browser's address field, type **192.168.9.194** (or the address of the Mediatrix 3000 DG). The PC you use must be connected to the same subnet as the Mediatrix 3000 DG or to a network where it can reach the Mediatrix 3000 DG's IP address. The following window appears:

The screenshot shows the Mediatrix login page. At the top is the Mediatrix logo. Below it is a green message: 'Please enter your username and password'. There are two input fields: 'User Name:' and 'Password:'. A 'Login' button is positioned below the password field.

2. Enter the user name **public**. Leave the *Password* field empty.

This screenshot is identical to the previous one, but the text 'public' is entered into the 'User Name' field and is circled in red.

3. Click **Login**.

The screenshot shows the Mediatrix web interface after a successful login. At the top, there are navigation tabs: 'System', 'Network', 'ISDN', and 'SIP'. Below these are sub-tabs: 'Information', 'Services', and 'Syslog'. The 'Information' sub-tab is selected, and the page title is 'Information'. Below the title is a table with the following data:

Current Status	
System Description:	Mediatrix 3301-001
Serial Number:	000340003P122060017
Firmware Version:	1.1.4.32
MAC Address:	0090f802b277
System Uptime (D:HH:MM:SS):	0:00:21:13
SNMP Port:	161

Installed Hardware		
Name	Serial Number	Location
Mediatrix 3301-020	00046000126060015	Slot2

You now have access to the Mediatrix 3000 DG's configuration web interface.



SIP Configuration

The purpose of this section is to setup the Mediatrix 3000 DG to use your SIP server for registration and call routing.

The SIP configuration tells the Mediatrix 3000 DG which SIP servers, parameters, and phone numbers to use. The following steps configure the Mediatrix 3000 DG as illustrated in the sample network topology.

1. Click the **SIP** menu, then the **Servers** sub-menu. The following window appears:

The screenshot shows the Mediatrix configuration interface with the 'SIP' menu selected. The 'Servers' sub-menu is active, displaying three tables:

SIP Default Servers				
Registrar Host:		192.168.10.10:0		
Proxy Host:		192.168.10.10:0		
Outbound Proxy Host:				

SIP Gateway Specific Registrar Servers				
Gateway Name	Gateway Specific	Registrar Host		
default	No	192.168.0.10:0		

SIP Gateway Specific Proxy Servers				
Gateway Name	Gateway Specific	Proxy Host	Outbound Proxy Host	
default	No	192.168.0.10:0	0.0.0.0:0	

Buttons: Submit, Submit & Refresh Registration

2. Set the *Registrar Host* field to the address of the central SIP Server **192.168.9.201**.
3. Set the *Proxy Host* field to the address of the central SIP Server **192.168.9.201**.

The screenshot shows the same Mediatrix configuration interface, but with the 'Registrar Host' and 'Proxy Host' fields in the 'SIP Default Servers' table updated to '192.168.9.201'. Red circles highlight these updated values.

SIP Default Servers				
Registrar Host:		192.168.9.201		
Proxy Host:		192.168.9.201		
Outbound Proxy Host:				

SIP Gateway Specific Registrar Servers				
Gateway Name	Gateway Specific	Registrar Host		
default	No	192.168.0.10:0		

SIP Gateway Specific Proxy Servers				
Gateway Name	Gateway Specific	Proxy Host	Outbound Proxy Host	
default	No	192.168.0.10:0	0.0.0.0:0	

Buttons: Submit, Submit & Refresh Registration

4. Click **Submit** to save the configuration changes. The Mediatrix 3000 DG is now configured to use your SIP server.
5. OPTIONAL STEP: if your SIP server requires SIP authentication, further configuration steps are necessary so the Mediatrix 3000 DG has all the needed information to authenticate to the server (see the section [Further Information and Configuration](#) for more details).



ISDN Configuration

The purpose of this section is to configure the Mediatrix 3000 DG's ISDN PRI interfaces in Terminal mode (TE) for an E1 line type. The PSTN line to which the Mediatrix 3000 DG is connected must be in Network mode (NT). If your setup differs, please refer to the section [Further Information and Configuration](#) for more details.

The ISDN configuration tells the Mediatrix 3000 DG how its ISDN PRI interfaces should behave. You must configure the ISDN parameters of the Mediatrix 3000 DG digital gateways for each interface you intend to use.

1. Click the **ISDN** menu, then the **Primary Rate Interface** sub-menu. The following window appears:

The screenshot shows the Mediatrix web interface for configuring a Primary Rate Interface. At the top, there are navigation tabs for System, Network, ISDN, and SIP. The ISDN tab is active, and the Primary Rate Interface sub-tab is selected. Below the navigation, there is a 'Select Interface:' dropdown menu currently set to 'Slot2/E1T1'. The main configuration area is divided into two sections: 'Hardware Configuration' and 'Interface Configuration'. The 'Interface Configuration' section contains various parameters with dropdown menus and text input fields.

Hardware Configuration	
Clock Reference (Applies to the slot):	None

Interface Configuration	
Endpoint Type:	TE
Line Type:	E1
Line Coding:	HDB3
Line Framing:	CRC4
Signaling Protocol:	DSS1
Network Location:	User
Preferred Encoding Scheme:	G.711 a-Law
Fallback Encoding Scheme:	G.711 u-Law
Channel Range:	1-30
Channel Allocation Strategy:	Ascending
Maximum Active Calls:	0
Signal Information Element:	Disable
Inband Tone Generation:	Enable
Inband DTMF Dialing:	Enable
Overlap Dialing:	Enable
Calling Name Max Length:	34
Exclusive B-Channel Selection:	Disable
Sending Complete:	Enable
Calling Line Information Presentation:	Disable
Calling Line Information Restriction:	Disable
Calling Line Information Restriction Override:	Disable
Send Restart On Startup:	Enable

Submit

2. Select the interface for which you want to apply the changes in the *Select Interface* drop-down menu. Depending on the model of Mediatrix 3000 DG you are using, you may have 1 or 2 interfaces available in the drop-down menu.

This close-up shows the 'Select Interface:' dropdown menu. The menu is open, showing two options: 'Slot2/E1T1' and 'Slot3/E1T1'. The 'Slot2/E1T1' option is highlighted with a red circle, indicating it is the selected interface.



0242

- In the *Interface Configuration* section, set the *Endpoint Type* field to **TE**. Leave all other parameters to their default values.

NOTE: The *Line Coding*, *Line Framing*, and *Signaling Protocol* fields are left to common default values here. However, they must be compatible with your setup. If your setup differs, please refer to the section [Further Information and Configuration](#) for more details.

System Network ISDN SIP

Status Primary Rate Interface

Primary Rate Interface

Select Interface: Slot2/E1T1

Hardware Configuration	
Clock Reference (Applies to the slot):	None

Interface Configuration	
Endpoint Type:	TE
Line Type:	E1
Line Coding:	HDB3
Line Framing:	CRC4
Signaling Protocol:	DSS1
Network Location:	User
Preferred Encoding Scheme:	G.711 a-Law
Fallback Encoding Scheme:	G.711 u-Law
Channel Range:	1-30
Channel Allocation Strategy:	Ascending
Maximum Active Calls:	0
Signal Information Element:	Disable
Inband Tone Generation:	Enable
Inband DTMF Dialing:	Enable
Overlap Dialing:	Enable
Calling Name Max Length:	34
Exclusive B-Channel Selection:	Disable
Sending Complete:	Enable
Calling Line Information Presentation:	Disable
Calling Line Information Restriction:	Disable
Calling Line Information Restriction Override:	Disable
Send Restart On Startup:	Enable

Submit

- Click **Submit** to apply the configuration changes made to this interface.

System Network ISDN SIP

Status Primary Rate Interface

Some changes require to restart a service to apply new configuration. Please click this link to access the services table: [Services](#)

Primary Rate Interface

Select Interface: Slot2/E1T1

Hardware Configuration	
Clock Reference (Applies to the slot):	None

Interface Configuration	
Endpoint Type:	TE
Line Type:	E1



5. If you have modified values, the parameters that have just been configured require a restart of the ISDN service. A service is a logical group of features. Restarting a service is a required mechanism for certain elements in the configuration. However, you can finish with the ISDN configuration steps before doing that. Once the ISDN configuration is ready, follow the instructions from [Appendix A - Restarting a Service](#) to restart the ISDN service as required.
6. Repeat steps 2 to 4 for all of the ISDN PRI interfaces listed in the *Select Interface* field.
7. Restart the ISDN service as described in [Appendix A - Restarting a Service](#).
8. To confirm that the ISDN configuration is completed and compatible with the rest of your setup, click the **Status** sub-menu. The following window appears:

The screenshot shows the Mediatrix Status window with the following structure:

- Navigation tabs: System, Network, ISDN, SIP. Sub-tab: Status, Primary Rate Interface.
- Section: Status
- Table 1: Clock Reference (Applies to the slot)

Location	Clock Reference (Applies to the slot)
Slot2:	None
Slot3:	Other Card
- Section: Slot2/E1T1 [Configure]

Physical Link: Up
Signaling: Up
Bearer Group
Channel 1: Free Channel 9: Free Channel 17: Free Channel 25: Free
Channel 2: Free Channel 10: Free Channel 18: Free Channel 26: Free
Channel 3: Free Channel 11: Free Channel 19: Free Channel 27: Free
Channel 4: Free Channel 12: Free Channel 20: Free Channel 28: Free
Channel 5: Free Channel 13: Free Channel 21: Free Channel 29: Free
Channel 6: Free Channel 14: Free Channel 22: Free Channel 30: Free
Channel 7: Free Channel 15: Free Channel 23: Free
Channel 8: Free Channel 16: Free Channel 24: Free
- Section: Slot3/E1T1 [Configure]

Physical Link: Up
Signaling: Up
Bearer Group
Channel 1: Free Channel 9: Free Channel 17: Free Channel 25: Free
Channel 2: Free Channel 10: Free Channel 18: Free Channel 26: Free
Channel 3: Free Channel 11: Free Channel 19: Free Channel 27: Free
Channel 4: Free Channel 12: Free Channel 20: Free Channel 28: Free
Channel 5: Free Channel 13: Free Channel 21: Free Channel 29: Free
Channel 6: Free Channel 14: Free Channel 22: Free Channel 30: Free
Channel 7: Free Channel 15: Free Channel 23: Free
Channel 8: Free Channel 16: Free Channel 24: Free

The *Physical Link* and *Signaling* status fields of each of the ISDN PRI interfaces configured should be **Up**. If they are not, please review the configuration steps from this section of the document and make sure they have been applied correctly and are compatible with your setup. Please refer to the section [Further Information and Configuration](#) for more details.



Call Routing Configuration

The purpose of this section is to configure the Mediatrix 3000 DG's call router so it can route calls to/from the VoIP network and the PSTN as described in the [Deployment Scenario](#) section.

You must configure the call router parameters of the Mediatrix 3000 DG digital gateways so that the calls can properly terminate. Remember that the purpose of this configuration note is to achieve the sample deployment scenario shown in [Figure 1](#). Your specific setup may vary.

Planning the Call Router

The goal of planning the Call router configuration is to summarize the rules incoming calls will follow when passing through the Mediatrix 3000 DG.

This is:

- Call sources and destinations.
- Calls allowed and rejected.
- Call properties manipulations.
- All routing possibilities.

Before going further with the configuration steps, you should refer back to the two types of calls described in the [Deployment Scenario](#) section.

The most basic call scenario implies at least the configuration of *Routes*. In the current deployment scenario, you will also configure *Mappings* to support Step 3 of call scenario A, and a *Hunt Group* to support Step 3 of call scenario B defined in the [Deployment Scenario](#) section (see [Further Information and Configuration](#) for more details).

- A Route is a virtual connection made inside the Mediatrix 3000 DG between call sources and destinations. Routes are part of the Mediatrix 3000 DG's Route table. When a call comes in, the Mediatrix 3000 DG uses its Route table to decide to which destination the call must be forwarded.
- A Hunt Group is a virtual entity that regroups different call destinations into one group. This entity can then be used as a call destination in a Route. When an incoming call is routed to a Hunt, the Hunt group selects one of its available destinations to route the call.
- A Mapping is a transformation that can be applied to a call when it goes through one of the Mediatrix 3000 DG's routes, according to various criteria. It can be used, for example, to apply changes to the call's dialled phone number.



Configuring the Call Router

Hunt Group

The purpose of this subsection is to configure a Hunt Group in the Mediatrix 3000 DG, so it can be later used as a route's destination.

In the current scenario, you will use a Hunt Group to group both of the Mediatrix 3632's ISDN PRI interfaces as one virtual call destination.


1. Click the **Telephony** menu, then the **Call Routing Config** sub-menu. The following window appears.

The screenshot shows the Mediatrix web interface for configuring call routing. The top navigation bar includes System, Network, ISDN, SIP, Telephony, and Management. Under the Telephony menu, there are sub-menus for DTMF Maps, CODECS, Call Routing Status, Call Routing Config, and Misc. The main content area is titled 'Call Routing Config' and contains several sections, each with a table and an 'Add' (+) button:

- Config Modified:** A simple table with one row containing 'no'.
- Route:** A table with columns: Index, Source, Properties Criteria, Expression Criteria, Mappings, Signaling Properties, Destination, and Actions.
- Mapping Type:** A table with columns: Index, Name, Criteria, Transformation, and Actions.
- Mapping Expression:** A table with columns: Index, Name, Criteria, Transformation, Sub Mappings, and Actions.
- Signaling Properties:** A table with columns: Index, Name, Early Connect, Early Disconnect, Destination Host, Allow 180 with SDP, Allow 183 without SDP, Privacy, SIP Headers Translations, Call Properties Translations, and Actions.
- SIP Headers Translations:** A table with columns: Index, Name, SIP Header, Built From, Fix Value, and Actions.
- Call Properties Translations:** A table with columns: Index, Name, Call Property, Built From, Fix Value, and Actions.
- Hunt:** A table with columns: Index, Name, Destinations, Selection Algorithm, Timeout (seconds), Causes, and Actions.

At the bottom right of the interface, there are 'Apply' and 'Rollback' buttons.

2. Locate the *Hunt* section at the bottom of the window.

- Click the  button at the bottom right of the *Hunt* section. The following window appears.

The screenshot shows the 'Configure Hunt End' window in the Mediatrix interface. The window has a navigation bar at the top with tabs for System, Network, ISDN, SIP, Telephony, and Management. Below this are sub-tabs for DTMF Maps, CODECS, Call Routing Status, Call Routing Config (selected), and Misc. The main content area is titled 'Call Routing Config' and contains a form with the following fields:

- Name:** An empty text input field.
- Destinations:** A large empty text area with a dropdown menu labeled '--- Suggestion ---' to its right.
- Selection Algorithm:** A dropdown menu set to 'Sequential'.
- Timeout (seconds):** A text input field containing '0'.
- Causes:** A text input field containing '31, 34, 38, 41, 42, 43, 44, 47' and a dropdown menu labeled '--- Suggestion ---' to its right.
- Config Status:** A small section at the bottom left of the form.

At the bottom right of the window are 'Submit' and 'Cancel' buttons.

To create a Hunt Group:

- Set the *Name* field to *hunt_PSTN*.
- Use the *Suggestion* drop-down list to select and add the possible destinations that will be part of the Hunt Group.

This screenshot shows the 'Configure Hunt End' window after some configuration. The 'Name' field is now filled with 'hunt_PSTN'. The 'Destinations' field is empty, but the 'Suggestion' dropdown menu is open, showing a list of options: '--- Suggestion ---', '--- Suggestion ---', 'isdn-Slot2/E1T1', 'isdn-Slot3/E1T1', 'sip-default', 'route', and 'hunt-'. The 'Causes' field remains filled with '31, 34, 38, 41, 42, 43, 44, 47'. The 'Submit' and 'Cancel' buttons are still visible at the bottom right.

- Following the [Deployment Scenario](#), select one by one both of the Mediatrix 3000 DG's ISDN PRI interfaces (**isdn-Slot2/E1T1**, which corresponds to port E1/T1 on SLOT 2 and **isdn-Slot3/E1T1**, which corresponds to port E1/T1 on SLOT 3). The interfaces will be automatically added as destinations for that Hunt Group.



0242

- 7. Leave the other fields with their default value.

System ■ Network ■ ISDN ■ SIP ■ **Telephony** ■ Management

DTMF Maps CODECS Call Routing Status **Call Routing Config** Misc

Call Routing Config

Configure Hunt End	Value	Suggestion
Name	hunt_PSTN	
Destinations	isdn-Slot2/E1T1, isdn-Slot3/E1T1	--- Suggestion ---
Selection Algorithm	Sequential	
Timeout (seconds)	0	
Causes	31, 34, 38, 41, 42, 43, 44, 47	--- Suggestion ---
Config Status		

Submit Cancel

- 8. Verify whether or not the ISDN interfaces have been successfully added to the configuration by checking the Destinations field, then click **Submit** to apply changes and save the new Hunt Group.

System ■ Network ■ ISDN ■ SIP ■ **Telephony** ■ Management

DTMF Maps CODECS Call Routing Status **Call Routing Config** Misc

Call Routing Config

Config Modified: **yes**

Route	Index	Source	Properties Criteria	Expression Criteria	Mappings	Signaling Properties	Destination	Actions
								+

Mapping Type	Index	Name	Criteria	Transformation	Actions
					+

Mapping Expression	Index	Name	Criteria	Transformation	Sub Mappings	Actions
						+

Signaling Properties	Index	Name	Early Connect	Early Disconnect	Destination Host	Allow 180 with SDP	Allow 183 without SDP	Privacy	SIP Headers Translations	Call Properties Translations	Actions
											+

SIP Headers Translations	Index	Name	SIP Header	Built From	Fix Value	Actions
						+

Call Properties Translations	Index	Name	Call Property	Built From	Fix Value	Actions
						+

Hunt	Index	Name	Destinations	Selection Algorithm	Timeout (seconds)	Causes	Actions
	1	hunt_PSTN	isdn-Slot2/E1T1, isdn-Slot3/E1T1	Sequential	0	31, 34, 38, 41, 42, 43, 44, 47	Edit + -

Apply Rollback



9. You are brought back to the **Call Routing Config** sub-menu. You can see the *Hunt Group* you have just created in the *Hunt* section.

You can also see a yellow Yes warning you that the configuration has been modified but not applied (i.e., the **Call Routing Status** differs from the **Call Routing Config**). The *Call Routing Config* sub-menu is a working area where you build up a Call Router configuration. While you work in this area, the configured parameters are saved but not applied (i.e., they are not used to process incoming calls). The yellow Yes flag warns you that the configuration has been modified but is not applied. You will apply the configuration later when it is complete.

Mappings

The purpose of this subsection is to configure Mappings in the Mediatrix 3000 DG, so they can be referred to later when creating routes that need to add/remove a prefix from called phone numbers.

In the current scenario, when calls are routed from the PSTN to SIP, the prefix **030** (area code) needs to be removed from the called number. As well, when calls are routed from SIP to the PSTN, the prefix **030** needs to be added to the called phone number. You will use Mappings to perform these transformations on the called phone number.

The Mappings are described by two entities in the Mediatrix 3000 DG: Mapping Types and Mapping Expressions. This allows to create virtual Mapping “tables”, where a Mapping Type defines the criteria a call must fulfill to enter the table, and the associated Mapping Expressions describe specific transformation rows in the table.

The most basic Mapping table consists in one Mapping Type and one associated Mapping Expression. In the current scenario, you will create two basic Mapping tables.

1. Locate the *Mapping Type* section.
2. Click the  button at the bottom right of the *Mapping Type* section. The following window appears.

The screenshot shows the Mediatrix web interface. At the top, there are navigation tabs: System, Network, ISDN, SIP, Telephony, and Management. Under the Telephony tab, there are sub-tabs: DTMF Maps, CODECS, Call Routing Status, Call Routing Config, and Misc. The 'Call Routing Config' sub-tab is active. Below the sub-tabs, there is a section titled 'Call Routing Config' with a plus icon. Underneath is a form titled 'Configure Mapping Type End'. The form has a table-like structure with two columns: 'Value' and an empty column. The rows are: Name (text input), Criteria (dropdown menu with 'None' selected), Transformation (dropdown menu with 'None' selected), and Config Status (text input). At the bottom of the form are three buttons: 'Submit', 'Submit And Insert Expression', and 'Cancel'.

To create a Mapping Type that applies to incoming calls from the PSTN and alters the called E.164 phone number, proceed as follows:

3. Set the *Name* field to **From_PSTN**.
4. Set the *Criteria* field to **Called E164** using the drop-down list.



0242

- Set the *Transformation* field to **Called E164** using the drop-down list.

System Network ISDN SIP Telephony Management

DTMF Maps CODECS Call Routing Status Call Routing Config Misc

Call Routing Config

Configure Mapping Type End	
	Value
Name	From_PSTN
Criteria	Called E164
Transformation	Called E164
Config Status	

Submit Submit And Insert Expression Cancel

- Click **Submit And Insert Expression** to apply changes, save the new Mapping Type, and proceed to enter new Mapping Expressions associated with the Mapping Type just created. The following window appears.

System Network ISDN SIP Telephony Management

DTMF Maps CODECS Call Routing Status Call Routing Config Misc

Call Routing Config

Configure Mapping Expression End		
	Value	Suggestion
Type	Called E164 to Called E164	
Name	From_PSTN	--- Suggestion ---
Criteria		--- Suggestion ---
Transformation		--- Suggestion ---
Sub Mappings		--- Suggestion ---
Config Status		

Submit Submit And Insert Expression Cancel

- To create a Mapping Expression that removes the prefix **030** from dialed phone numbers that start with **030**, set the *Criteria* field to **030(+)** and the *Transformation* field to **1**.

System Network ISDN SIP Telephony Management

DTMF Maps CODECS Call Routing Status Call Routing Config Misc

Call Routing Config

Configure Mapping Expression End		
	Value	Suggestion
Type	Called E164 to Called E164	
Name	From_PSTN	--- Suggestion ---
Criteria	030(+)	--- Suggestion ---
Transformation	1	--- Suggestion ---
Sub Mappings		--- Suggestion ---
Config Status		

Submit Submit And Insert Expression Cancel

This mapping expression applies its transformation to any called E.164 phone number starting with **030**. The transformation consists in removing the **030** prefix from the called E.164 phone number. If the phone numbers in your specific scenario differ, you can modify the contents of the *Criteria* and *Transformation* fields to suit your needs. These fields use the regular expressions syntax (see the section [Further Information and Configuration](#) for more details).

- Click **Submit** to apply changes and save the new Mapping Expression.



Configuration Notes

0242

9. Repeat steps 2 to 8 to create an additional Mapping Type and Mapping Expression. These apply to outgoing calls to the PSTN and add the prefix **030** to dialed phone numbers. Use the following field values.
 - a. Mapping Type: set the *Name* field to **To_PSTN**, the *Criteria* field to **Called E164** and the *Transformation* field to **Called E164**.
 - b. Mapping Expression: set the *Criteria* field to **.+** and the *Transformation* field to **030\0**.
10. After completing all the Mapping creation steps, you will see your two Mapping Types and two Mapping Expressions. You will also see the yellow Yes warning you that the configuration has been modified but not applied (i.e., the **Call Routing Status** differs from the **Call Routing Config**).

System ■ Network ■ ISDN ■ SIP ■ Telephony ■ Management

DTMF Maps CODECS Call Routing Status Call Routing Config Misc

Call Routing Config

Config Modified: **yes**

Route									
Index	Source	Properties	Criteria	Expression	Criteria	Mappings	Signaling Properties	Destination	Actions
+									

Mapping Type					Actions
Index	Name	Criteria	Transformation		
1	From_PSTN	Called E164	Called E164	Edit	▼ + -
2	To_PSTN	Called E164	Called E164	Edit	▲ + -
+					

Mapping Expression						Actions
Index	Name	Criteria	Transformation	Sub Mappings		
1	From_PSTN	030(+)	\1		Edit	▼ + -
2	To_PSTN	.+	030\0		Edit	▲ + -
+						

Signaling Properties										
Index	Name	Early Connect	Early Disconnect	Destination Host	Allow 180 with SDP	Allow 183 without SDP	Privacy	SIP Headers Translations	Call Properties Translations	Actions
+										

SIP Headers Translations					
Index	Name	SIP Header	Built From	Fix Value	Actions
+					

Call Properties Translations					
Index	Name	Call Property	Built From	Fix Value	Actions
+					

Hunt						
Index	Name	Destinations	Selection Algorithm	Timeout (seconds)	Causes	Actions
1	hunt_PSTN	isdn-Slot2/E1T1, isdn-Slot3/E1T1	Sequential	0	31, 34, 38, 41, 42, 43, 44, 47	Edit
+						

Route

The purpose of this subsection is to configure the Mediatrix 3000 DG so it makes virtual “connections” between call sources and destinations, using existing Mappings and Hunt Groups as needed.

1. Locate the *Route* section at the top of the window.
2. Click the button at the bottom right of the *Route* section. The following window appears.

Configure Route End	Value	Suggestion
Source	<input type="text"/>	--- Suggestion ---
Properties Criteria	None	
Expression Criteria	<input type="text"/>	--- Suggestion ---
Mappings	<input type="text"/>	--- Suggestion ---
Signaling Properties	<input type="text"/>	--- Suggestion ---
Destination	<input type="text"/>	--- Suggestion ---
Config Status		

Submit Cancel

3. To create a route from SIP (**sip-default**) to the PSTN (**hunt_PSTN**):
 - o set the *Source* field to **sip-default**.
 - o set the *Destination* field to **hunt-hunt_PSTN**.
 - o add the mapping **To_PSTN** to the *Mappings* field.

You can use the three fields' associated *Suggestion* drop-down list to help you fill them. This route will satisfy call scenario B described in section [Deployment Scenario](#), where phone 1 calls phone 2.

Configure Route End	Value	Suggestion
Source	sip-default	--- Suggestion ---
Properties Criteria	None	
Expression Criteria	<input type="text"/>	--- Suggestion ---
Mappings	To_PSTN	--- Suggestion --- --- Suggestion --- From_PSTN To_PSTN Clear
Signaling Properties	<input type="text"/>	
Destination	hunt-hunt_PSTN	
Config Status		

Submit Cancel



0242

- Click **Submit** to apply changes and save the new route.

- You are brought back to the **Call Routing Config** sub-menu. You can see the route you just created in the *Route* section. You can also see the yellow Yes warning you that the configuration has been modified but not applied (i.e., the **Call Routing Status** differs from the **Call Routing Config**).
- Repeat steps 2 to 5 twice to create two additional routes. These new routes will satisfy call scenario A described in [Deployment Scenario](#), where phone 2 calls phone 1:
 - one from Source **isdn-Slot2/E1T1** to Destination **sip-default** using Mapping **From_PSTN**, and
 - one from Source **isdn-Slot3/E1T1** to Destination **sip-default** using Mapping **From_PSTN**.



0242

7. After completing all the route configuration steps, you will see your three routes.

System Network ISDN SIP **Telephony** Management

DTMF Maps CODECS Call Routing Status **Call Routing Config** Misc

Call Routing Config

Config Modified: **yes**

Route								
Index	Source	Properties	Criteria	Expression Criteria	Mappings	Signaling Properties	Destination	Actions
1	sip-default	None			To_PSTN		hunt-hunt_PSTN	Edit v + -
2	isdn-Slot2/E1T1	None			From_PSTN		sip-default	Edit ^ v + -
3	isdn-Slot3/E1T1	None			From_PSTN		sip-default	Edit ^ v + -

Mapping Type				
Index	Name	Criteria	Transformation	Actions
1	From_PSTN	Called E164	Called E164	Edit v + -
2	To_PSTN	Called E164	Called E164	Edit ^ v + -

Mapping Expression					
Index	Name	Criteria	Transformation	Sub Mappings	Actions
1	From_PSTN	030(+)	\1		Edit v + -
2	To_PSTN	.+	030\0		Edit ^ v + -

Signaling Properties										
Index	Name	Early Connect	Early Disconnect	Destination Host	Allow 180 with SDP	Allow 183 without SDP	Privacy	SIP Headers Translations	Call Properties Translations	Actions
										+

SIP Headers Translations					
Index	Name	SIP Header	Built From	Fix Value	Actions
					+

Call Properties Translations					
Index	Name	Call Property	Built From	Fix Value	Actions
					+

Hunt						
Index	Name	Destinations	Selection Algorithm	Timeout (seconds)	Causes	Actions
1	hunt_PSTN	isdn-Slot2/E1T1, isdn-Slot3/E1T1	Sequential	0	31, 34, 38, 41, 42, 43, 44, 47	Edit v + -

8. Click **Apply**. This applies all the parameters from **Call Routing Config** to the system. You can also see that the yellow *Config Modified* **yes** flag is cleared.



9. The call routing parameters can be seen in the **Call Routing Status** window.

The screenshot shows the Mediatrix configuration interface for Call Routing Status. It includes several tables and sections:

- System Navigation:** System, Network, ISDN, SIP, Telephony, Management. Sub-sections: DTMF Maps, CODECS, Call Routing Status, Call Routing Config, Misc.
- Call Routing Status:** Config Modified: no
- Route Table:**

Route	Source	Properties Criteria	Expression Criteria	Mappings	Signaling Properties	Destination
	sip-default	None		To_PSTN		hunt-hunt_PSTN
	isdn-Slot2/E1T1	None		From_PSTN		sip-default
	isdn-Slot3/E1T1	None		From_PSTN		sip-default
- Mapping From_PSTN:**

Criteria Called E164	Transformation Called E164	Sub Mappings
030(+)	\1	
- Mapping To_PSTN:**

Criteria Called E164	Transformation Called E164	Sub Mappings
+	030\0	
- Signaling Properties Table:**

Name	Early Connect	Early Disconnect	Destination Host	Allow 180 with SDP	Allow 183 without SDP	Privacy	SIP Headers Translations	Call Properties Translations
SIP Headers Translations								
Index	Name	SIP Header	Built From	Fix Value				
Call Properties Translations								
Index	Name	Call Property	Built From	Fix Value				
- Hunt Table:**

Hunt Name	Destinations	Selection Algorithm	Timeout (seconds)	Causes
hunt_PSTN	isdn-Slot2/E1T1, isdn-Slot3/E1T1	Sequential	0	31, 34, 38, 41, 42, 43, 44, 47
- Available Interface (ISDN endpoints and SIP Gateways):**

Name
isdn-Slot2/E1T1
isdn-Slot3/E1T1
sip-default

The configuration note has prepared the system to perform calls in both directions.

Basic Call Establishment

Once this configuration procedure is completed, you are ready to start making basic calls through your new Mediatrix 3000 DG, providing that the rest of your network's setup is configured properly.

Perform Basic Call (Scenario A)

- Pickup phone number 2.
- Dial **030 695 550**.
- Phone number 1 rings.
- Pick up phone number 1.
- The call is established.
- Hang up both phones to terminate the call.



Perform Basic Call (Scenario B)

- Pickup phone number 1.
- Dial **695 110**.
- Phone number 2 rings.
- Pick up phone number 2.
- The call is established.
- Hang up both phones to terminate the call.

Further Information and Configuration

You can refer to the following documents/sections for further information on configuration parameters and features used in this configuration note.

All documents are available online on the Mediatrix Download Portal at <https://support.mediatrix.com/DownloadPlus/Download.asp>.

- 1- For more information on the Partial Reset feature, and on what to do after performing a Partial Reset to recover a unit with which you have lost contact, refer to the *Partial Reset* section of the *Mediatrix 3000 Series Digital Gateway Software Configuration Guide*.
- 2- For more information on configuring level 2 network links, level 3 network interfaces and IP addresses, refer to the *Interfaces Configuration* section of the *Mediatrix 3000 Series Digital Gateway Software Configuration Guide*.
- 3- For more information on configuring the Mediatrix 3000 DG's ISDN BRI interfaces in TE or NT mode and additional parameters such as ISDN power feeding, refer to the *ISDN Configuration* section of the *Mediatrix 3000 Series Digital Gateway Software Configuration Guide*.
- 4- For more information on configuring the Mediatrix 3000 DG to work with SIP servers that require SIP authentication, refer to the *SIP Authentication* section of the *Mediatrix 3000 Series Digital Gateway Software Configuration Guide*.
- 5- For information on how to configure the Mediatrix 3000 DG so it processes dialed DTMFs according to specific dialing plans, refer to the *DTMF Maps Configuration* section of the *Mediatrix 3000 Series Digital Gateway Software Configuration Guide*.
- 6- For more information on call routing including routes, criteria, mappings, signaling properties, hunts, and regular expressions, refer to the *Call Router Configuration* section of the *Mediatrix 3000 Series Digital Gateway Software Configuration Guide*.



Appendix A - Restarting a Service

The Mediatrix 3000 DG's features are divided in logical entities called *Services*. Some parameters in the Mediatrix 3000 DG require that the service to which they belong be restarted when they are configured in order for their new configuration value to be correctly applied. When this happens (usually after you click a **Submit** button), a message and a **Services** link are displayed at the top of the window stating that a service must be restarted.

In this example, a parameter of the ISDN services requires that this service be restarted.

System ■ Network ■ ISDN ■ SIP ■

Mediatrix®
A Division of mxcsl Corporation

Status Primary Rate Interface

Some changes require to restart a service to apply new configuration.
Please click this link to access the services table: [Services](#)

Primary Rate Interface

Select Interface: Slot2/E1T1

Hardware Configuration	
Clock Reference (Applies to the slot):	None

Interface Configuration	
Endpoint Type:	NT
Line Type:	E1

1. Click the **Services** link, which brings you to the **Services** page. In this page, each service that requires to be restarted has a "*" besides its name, as illustrated in the following window.

System ■ Network ■ ISDN ■ SIP ■ Telephony ■ Management

Mediatrix®

Information Services Syslog

Note: A "*" beside the service name indicates that the service must be restarted to apply new configuration.

Services

Service	Class	Status	Action	Comment
Authentication, Authorization and Accounting (AAA):	System	Started	▼	
Basic Network Interface (BNI):	User	Started	▼	
Call Routing (CROUT):	User	Started	▼	
Certificate Manager (CERT):	System	Started	▼	
Configuration Manager (CONF):	System	Started	▼	
Device Control Manager (DCM):	System	Started	▼	
Endpoint Administration (EPADM):	User	Started	▼	
Endpoint Services (EPSERV):	User	Started	▼	
Ethernet Manager (ETH):	System	Started	▼	
Firmware Pack Updater (FPU):	System	Started	▼	
Host Configuration (HOC):	System	Started	▼	
* Integrated Services Digital Network (ISDN):	User	Started	▼	
Local Quality Of Service (LQOS):	System	Started	▼	
Media IP Transport (MIPT):	User	Started	▼	
Notifications and Logging Manager (NLM):	User	Started	▼	
Process Control Manager (PCM):	System	Started	▼	
Service Controller Manager (SCM):	System	Started	▼	
SIP Endpoint (SIPEP):	User	Started	▼	
Simple Network Management Protocol (SNMP):	User	Started	▼	
Telephony Interface (TELIF):	User	Started	▼	
Web (WEB):	User	Started	▼	



0242

- Restart each service that has a "*" besides its name by clicking the **Restart** action so it correctly applies its new configuration.

* Integrated Services Digital Network (ISDN):	User	Started	<input type="button" value="Restart"/>
Local Quality Of Service (LQOS):	System	Started	<input type="button" value="Restart"/>
Media IP Transport (MIPT):	User	Started	<input type="button" value="Restart"/>

- Restarting a service may require other services to be restarted. This is why you would see a few services go from the stopping to starting to started states, even if you only restarted one service. The displayed status may be refreshed at any time by clicking the **Services** submenu or the **here** link.

Note: A "*" beside the service name indicates that the service must be restarted to apply new configuration.

Services

Successfully sent the restart command to the service.
Service statuses may have changed while the current page was loading, please click [here](#) to get the latest statuses.

Service	Class	Status	Action	Comment
Authentication, Authorization and Accounting (AAA):	System	Started	<input type="button" value="Restart"/>	
Basic Network Interface (BNI):	User	Started	<input type="button" value="Restart"/>	
Call Routing (CROUT):	User	Stopping	<input type="button" value="Restart"/>	
Certificate Manager (CERT):	System	Started	<input type="button" value="Restart"/>	
Configuration Manager (CONF):	System	Started	<input type="button" value="Restart"/>	
Device Control Manager (DCM):	System	Started	<input type="button" value="Restart"/>	
Endpoint Administration (EPADM):	User	Stopping	<input type="button" value="Restart"/>	
Endpoint Services (EPSERV):	User	Stopping	<input type="button" value="Restart"/>	
Ethernet Manager (ETH):	System	Started	<input type="button" value="Restart"/>	
Firmware Pack Updater (FPU):	System	Started	<input type="button" value="Restart"/>	
Host Configuration (HOC):	System	Started	<input type="button" value="Restart"/>	
Integrated Services Digital Network (ISDN):	User	Stopping	<input type="button" value="Restart"/>	
Local Quality Of Service (LQOS):	System	Started	<input type="button" value="Restart"/>	
Media IP Transport (MIPT):	User	Stopping	<input type="button" value="Restart"/>	
Notifications and Logging Manager (NLM):	User	Started	<input type="button" value="Restart"/>	
Process Control Manager (PCM):	System	Started	<input type="button" value="Restart"/>	
Service Controller Manager (SCM):	System	Started	<input type="button" value="Restart"/>	
SIP Endpoint (SIPEP):	User	Stopping	<input type="button" value="Restart"/>	
Simple Network Management Protocol (SNMP):	User	Started	<input type="button" value="Restart"/>	
Telephony Interface (TELIF):	User	Stopping	<input type="button" value="Restart"/>	
Web (WEB):	User	Started	<input type="button" value="Restart"/>	

Thank you for using Mediatrix solutions!